

Maintenance of Spider banner lift

The Spider shall always be hoisted down at average winds of 12 m/s (wind gusts of about 20 m/s) or more.

Check regularly the wear and tear of the halyard from the knot and about 10 cm backwards,

If the halyard is torn, cut off the torn part of the halyard and make a new knot. At normal weather conditions, this procedure shall be repeated each 3rd month or with shorter intervals.

Always make a check of the halyard as described above, if the lift by mistake has been hoisted during bad weather conditions.

Please note that the plastic ball, which prevents that metal parts are torn against each other, ALWAYS shall be attached according to the installation instructions.

The recommended maximum size of the flag is 1,5 x 3,5 m (w x h).

AB GUSTAV STRÖMBLAD

Gamla Alingsåsvägen 27

433 38 PARTILLE